XRite MA91 Installation

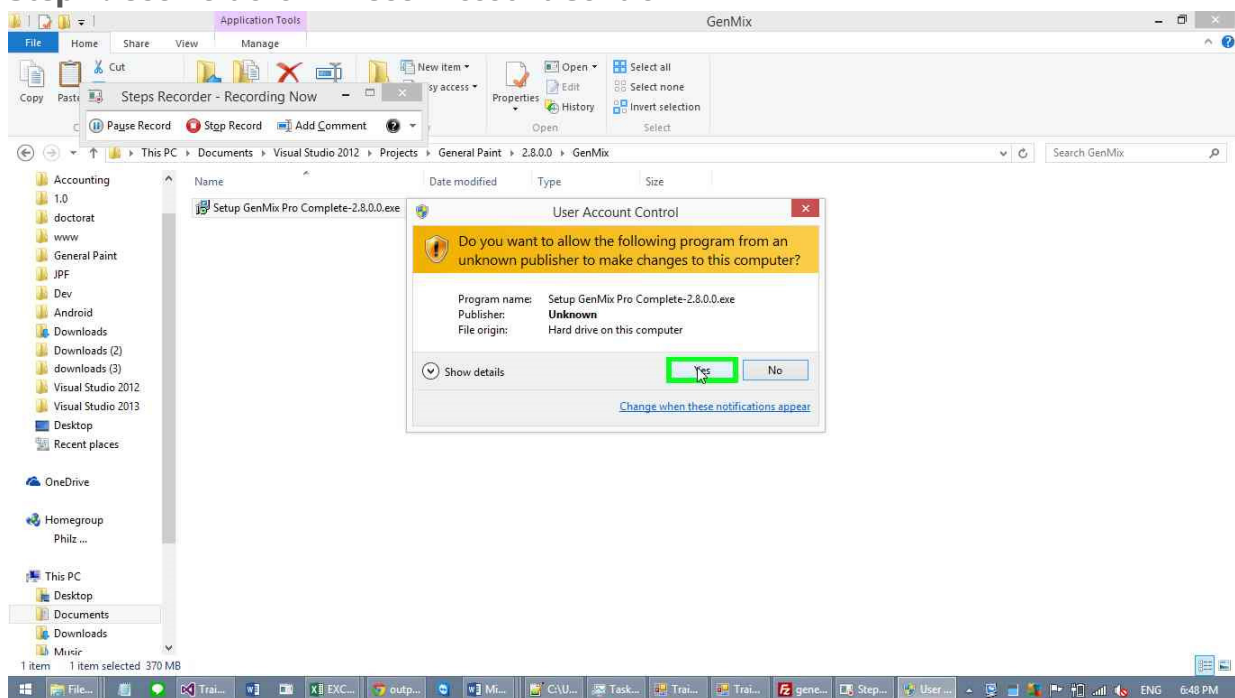# Table of Contents

1. **Step By Step Instructions to install the MA91 Driver.**

Step 1: User left double click on GenMix Pro **Complete**
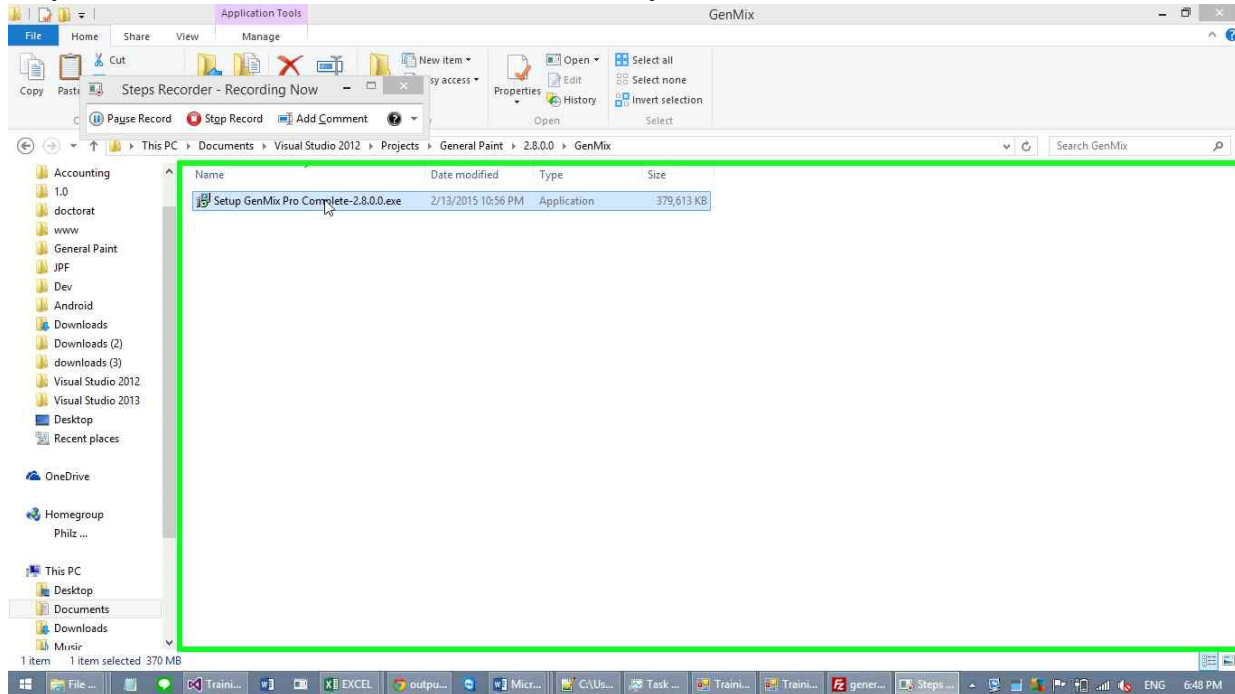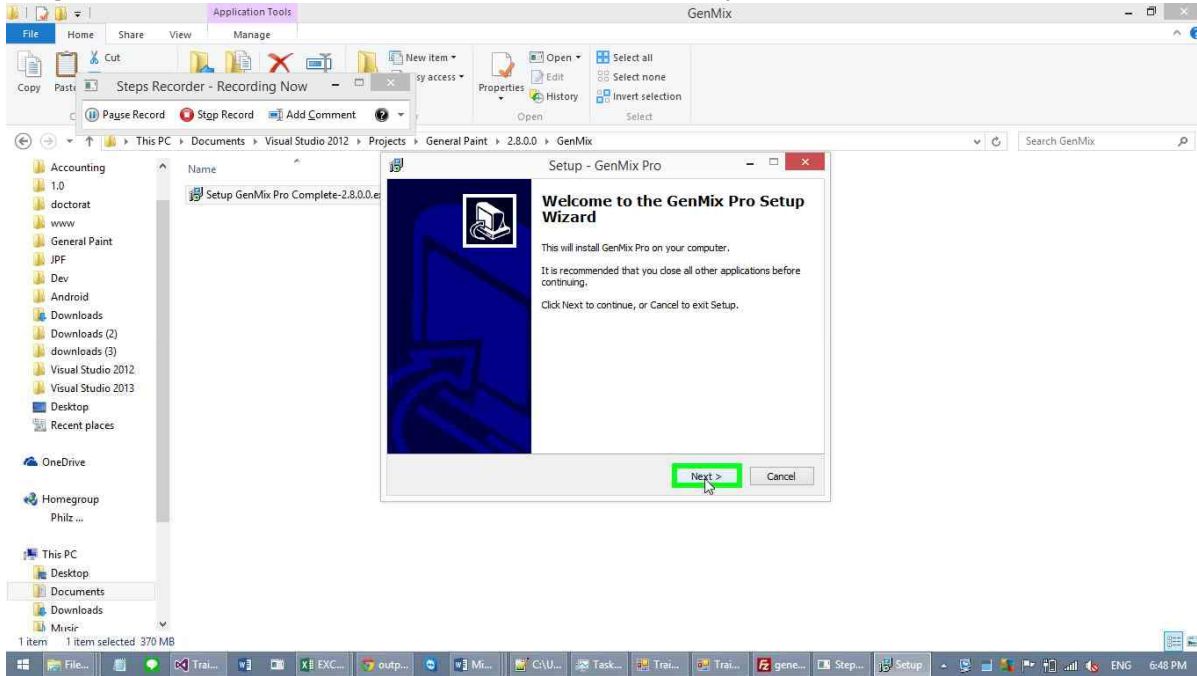

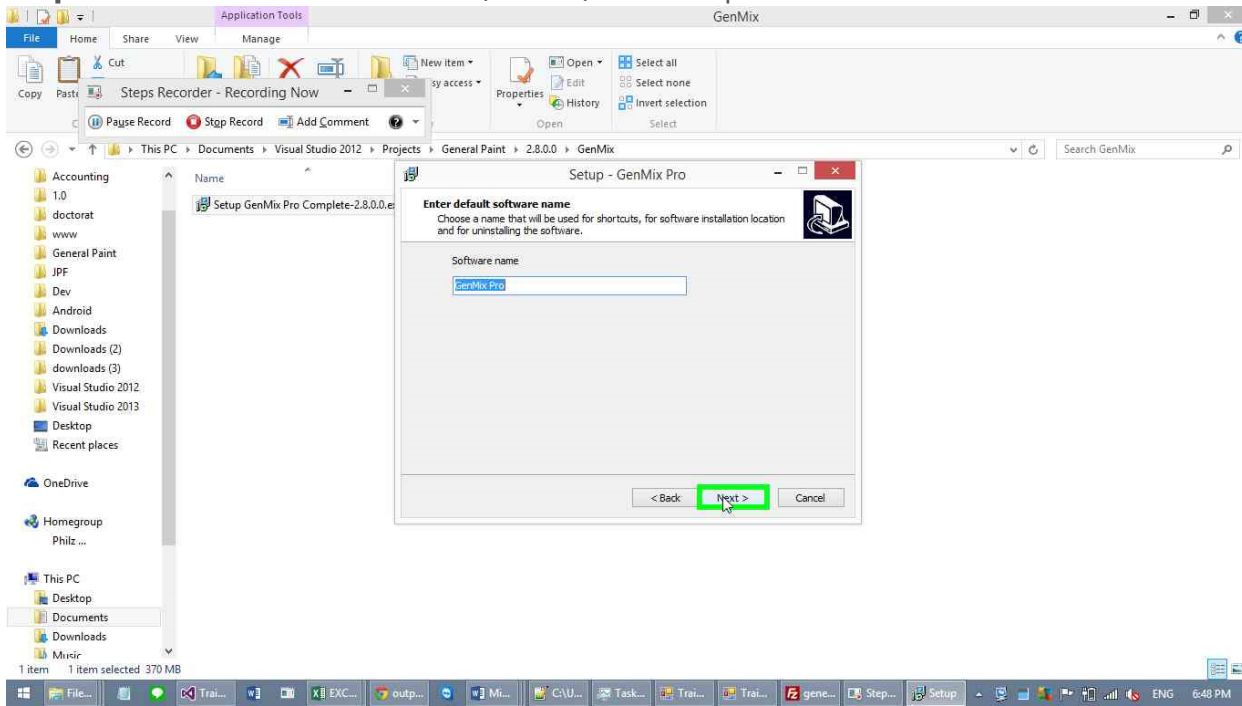**Step 2:** User left click in "User Account Control"

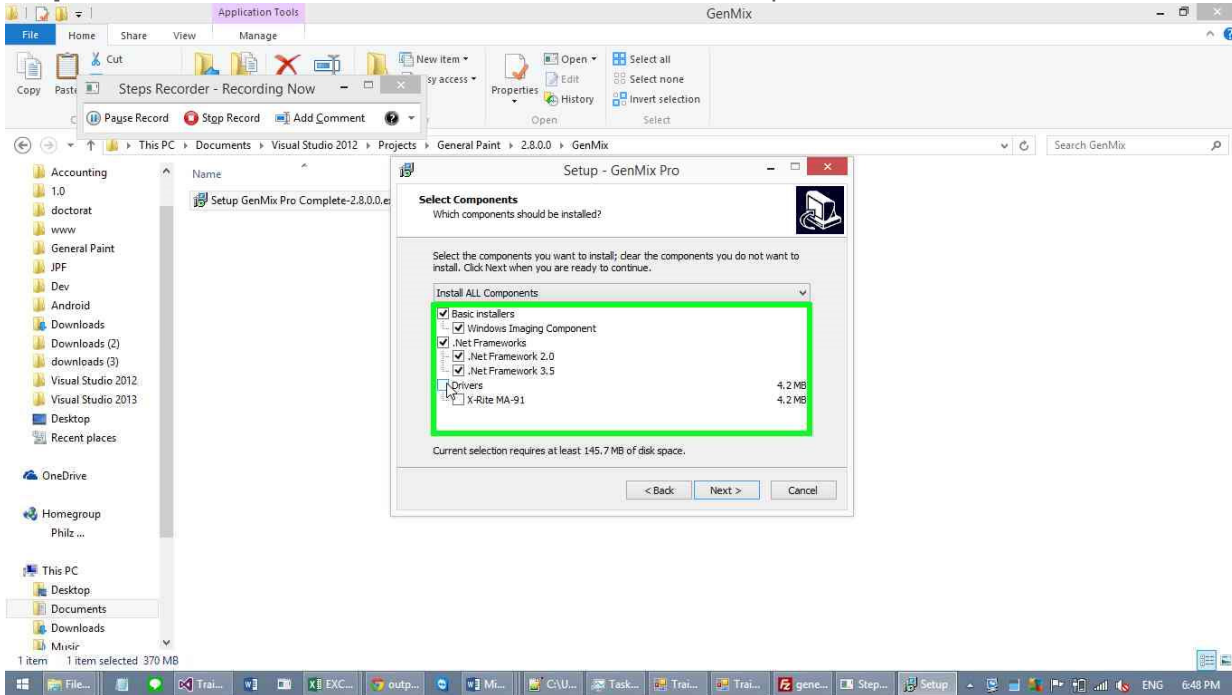**Step 3:** User left click on "Next > (button)" in "Setup - GenMix Pro"

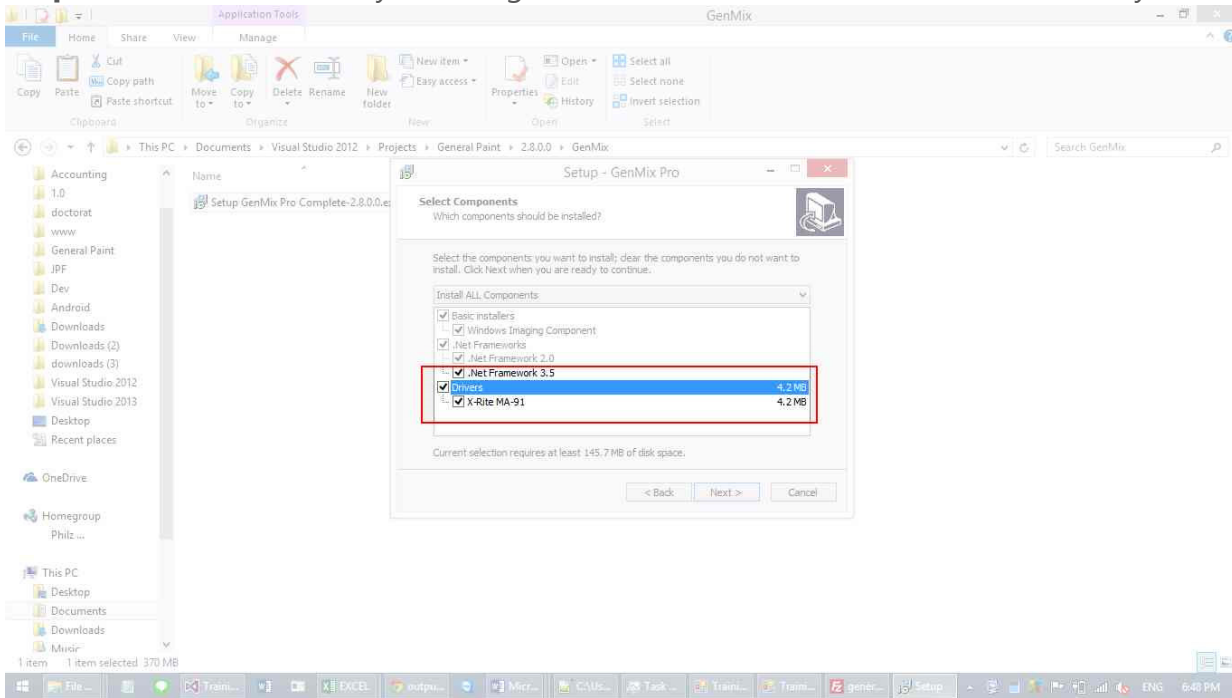**Step 4:** User left click on "Next > (button)" in "Setup - GenMix Pro"

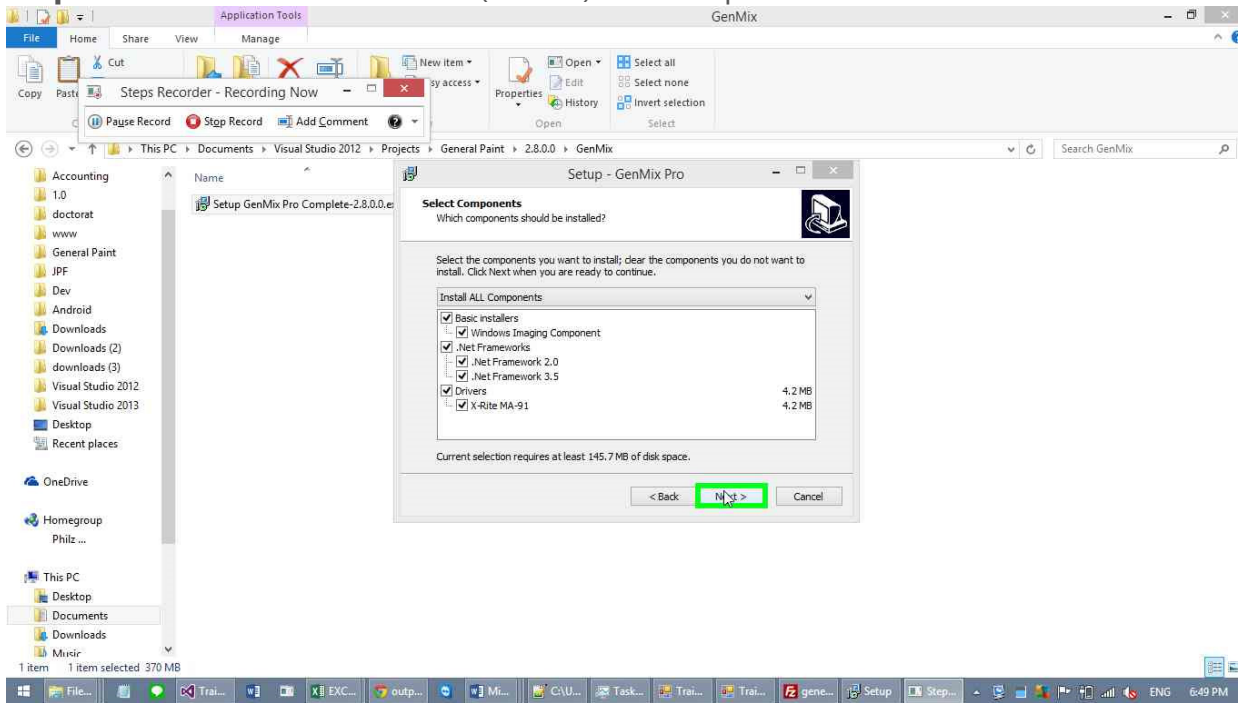**Step 5:** User left click on "Drivers (check box)" in "Setup - GenMix Pro"

Step 6: User Comment: "By checking the titles, the driver will install automatically"
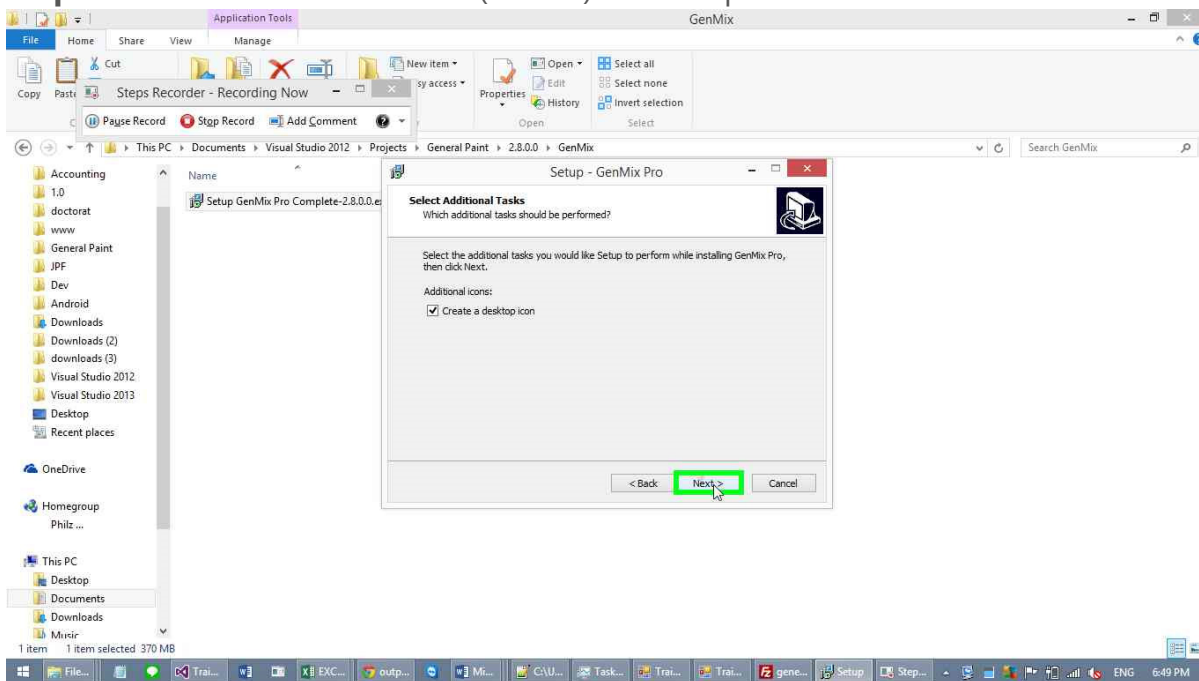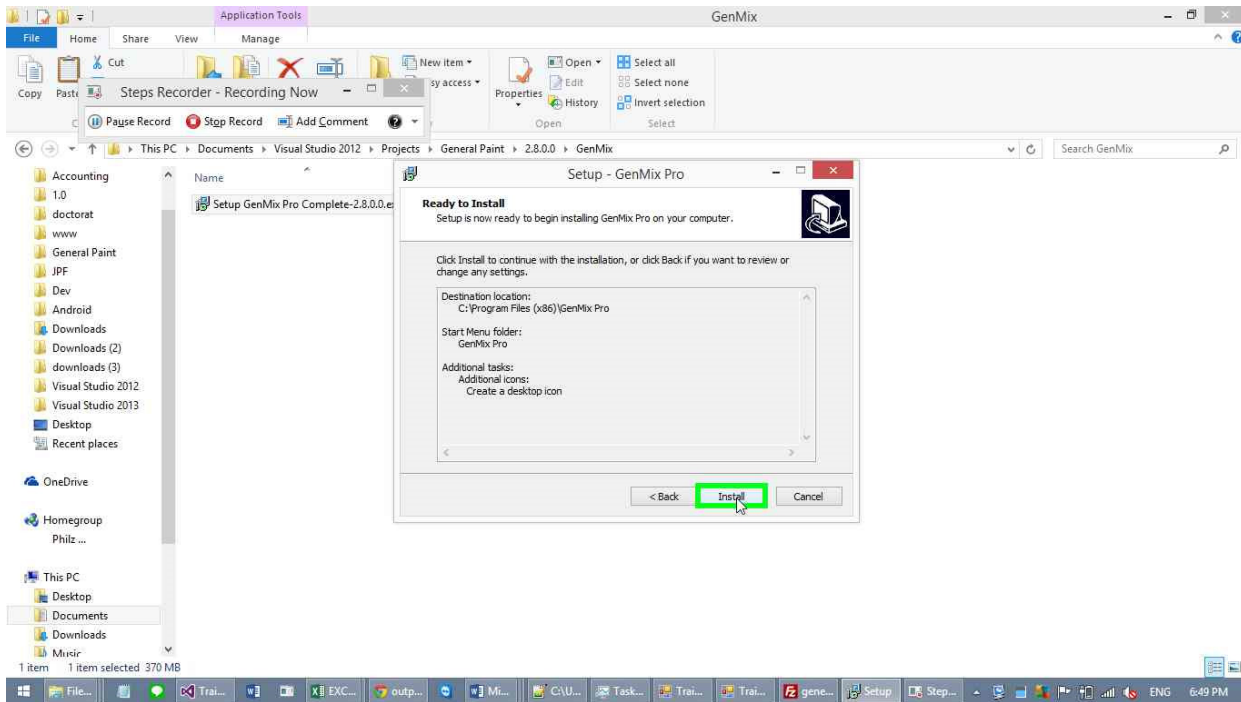
Step 7: User left click on "Next > (button)" in "Setup - GenMix Pro"
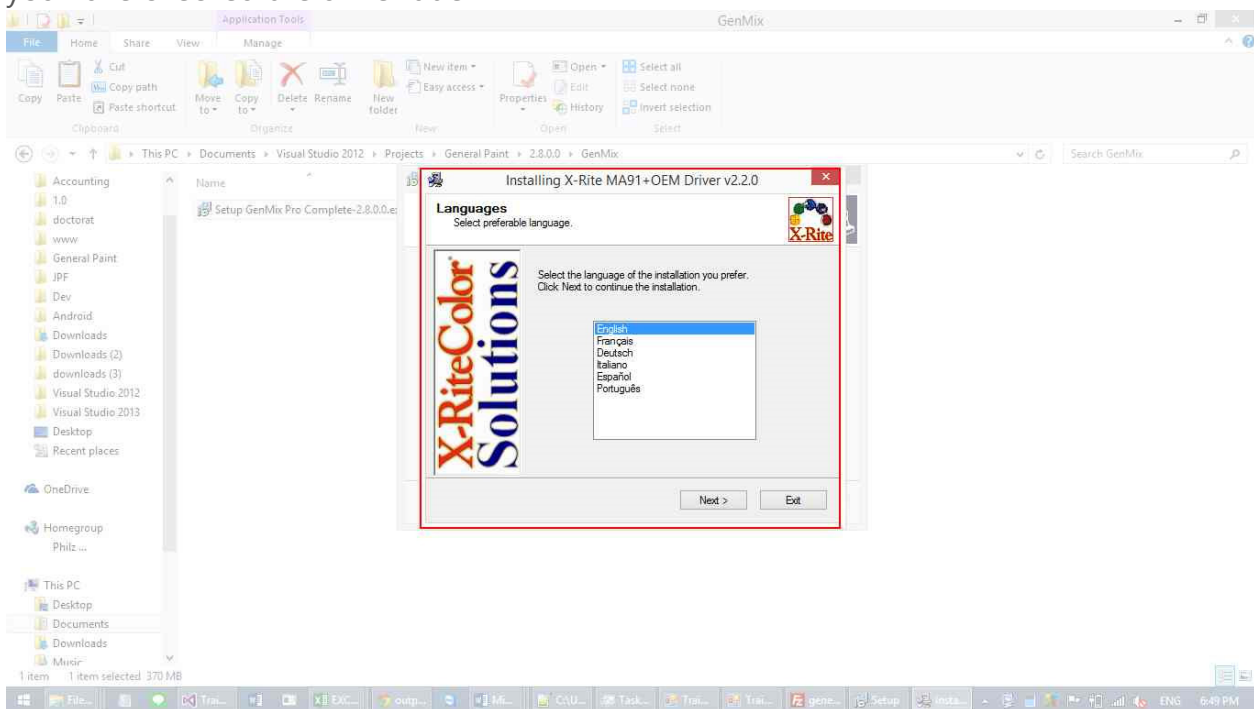

Step 8: User left click on "Next > (button)" in "Setup - GenMix Pro"

Step 9: User left click on "Install (button)" in "Setup - GenMix Pro"
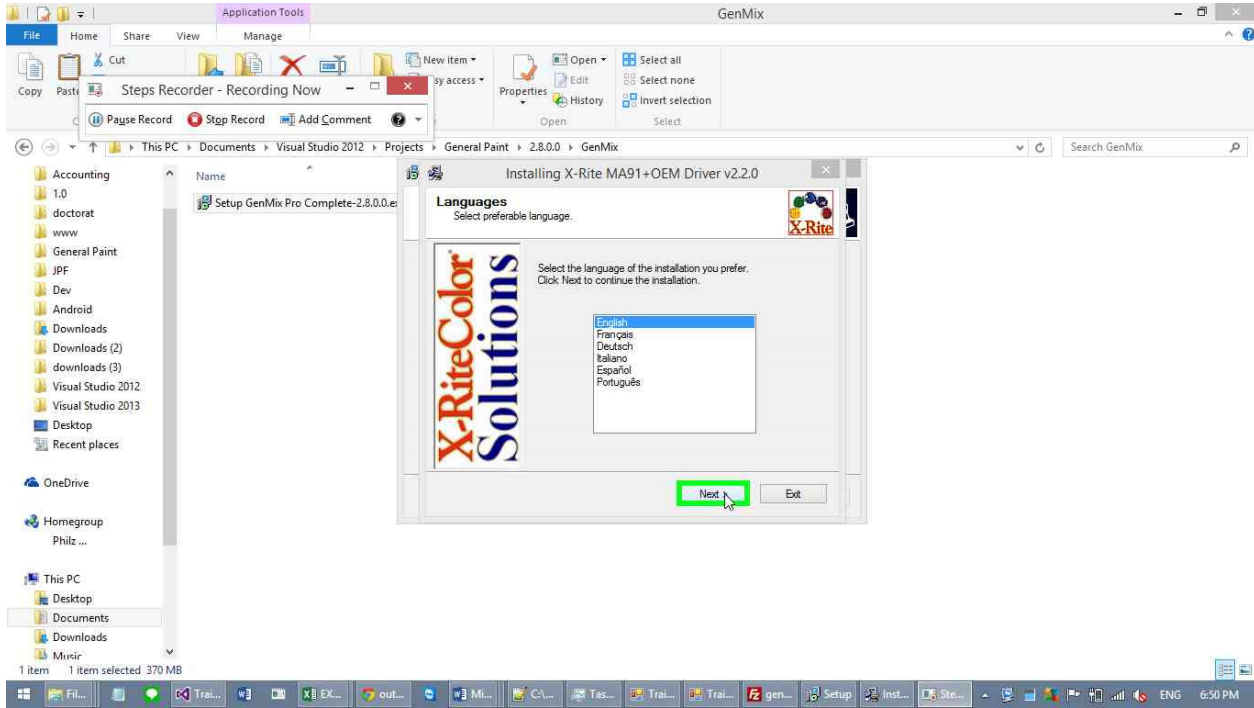
Step 10: User Comment: "Installation screen of the X-Rite MA91 driver will appear, since you have checked the driver title"
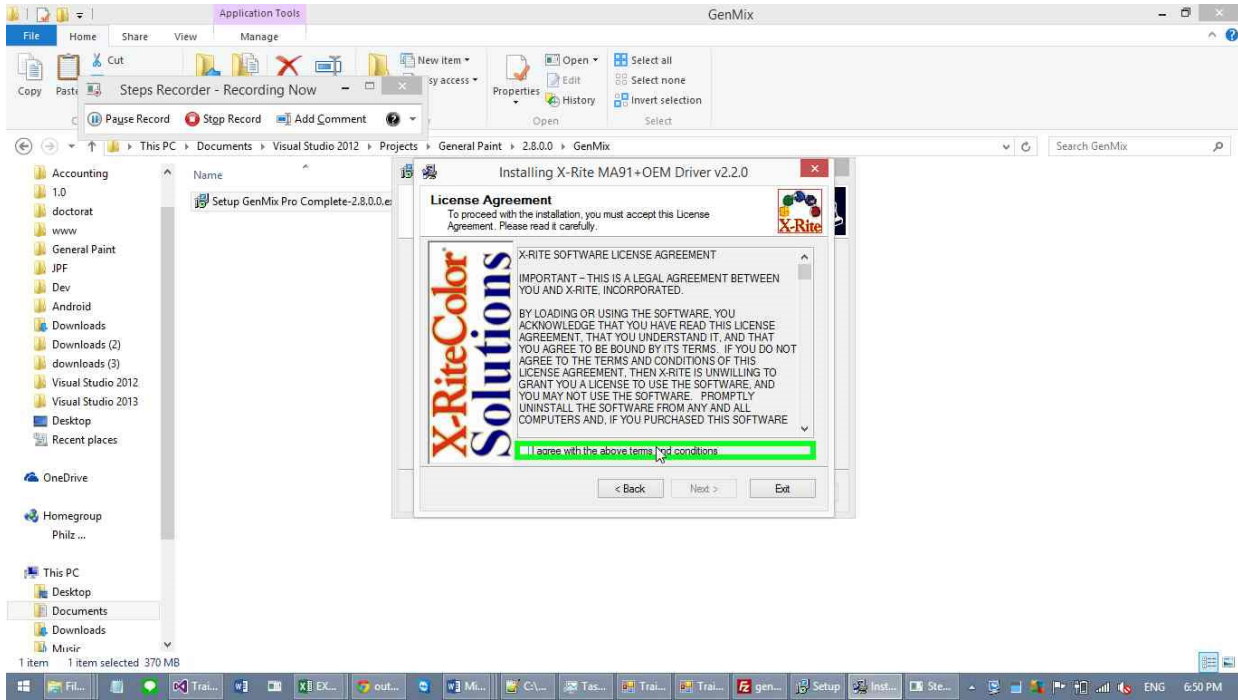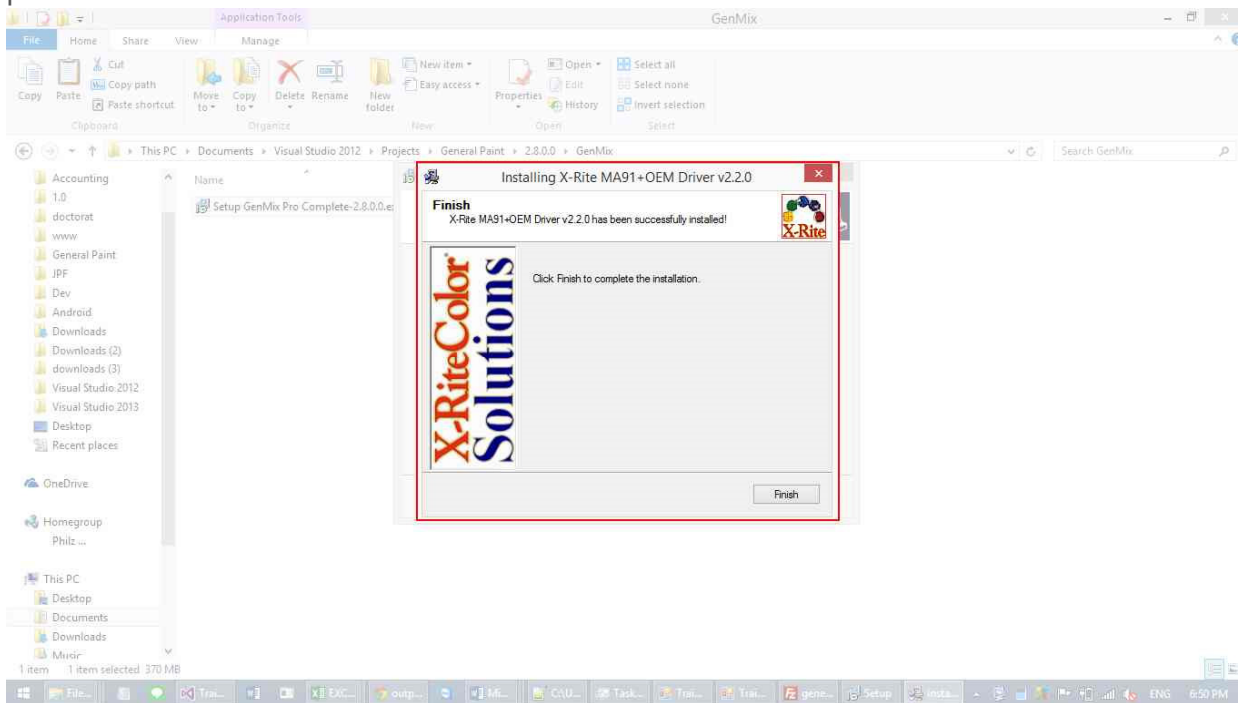
Step 11: User left click on "Next > (button)" in "Installing X-Rite MA91+OEM Driver v2.2.0"

Step 12: User left click on "I agree with the above terms and conditions (check box)" in "Installing X-Rite MA91+OEM Driver v2.2.0"
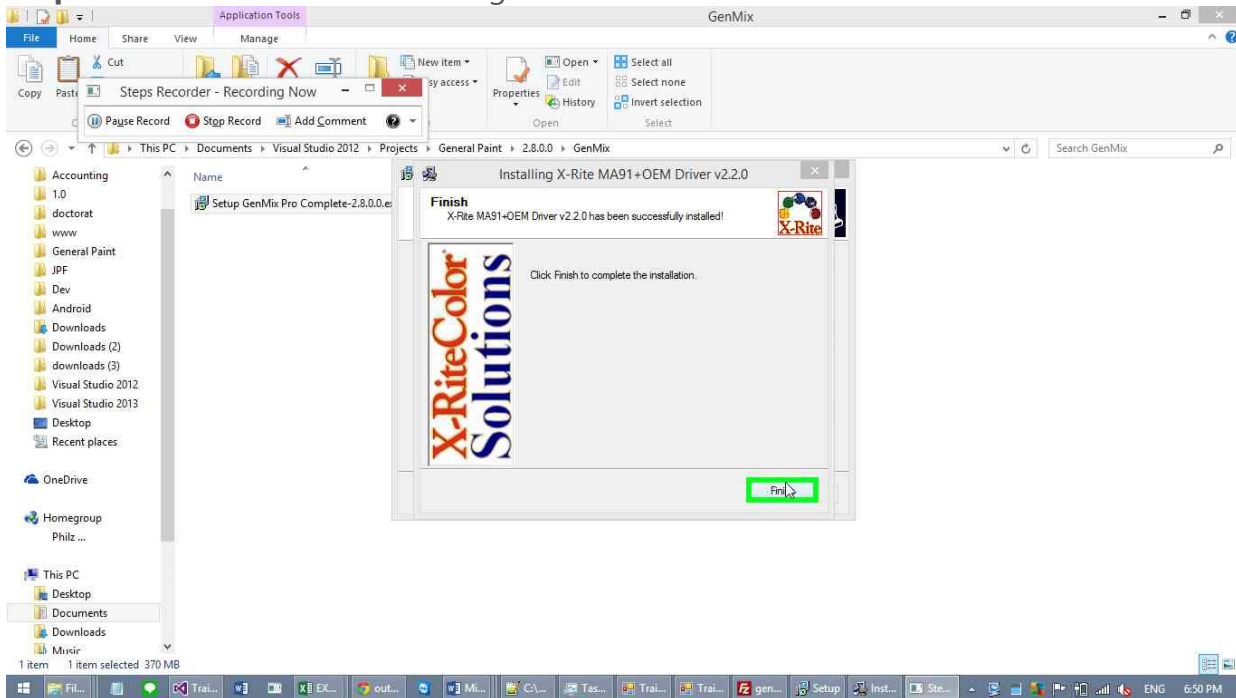
Step 13: User Comment: "Driver installation has been completed, setup can now proceed."
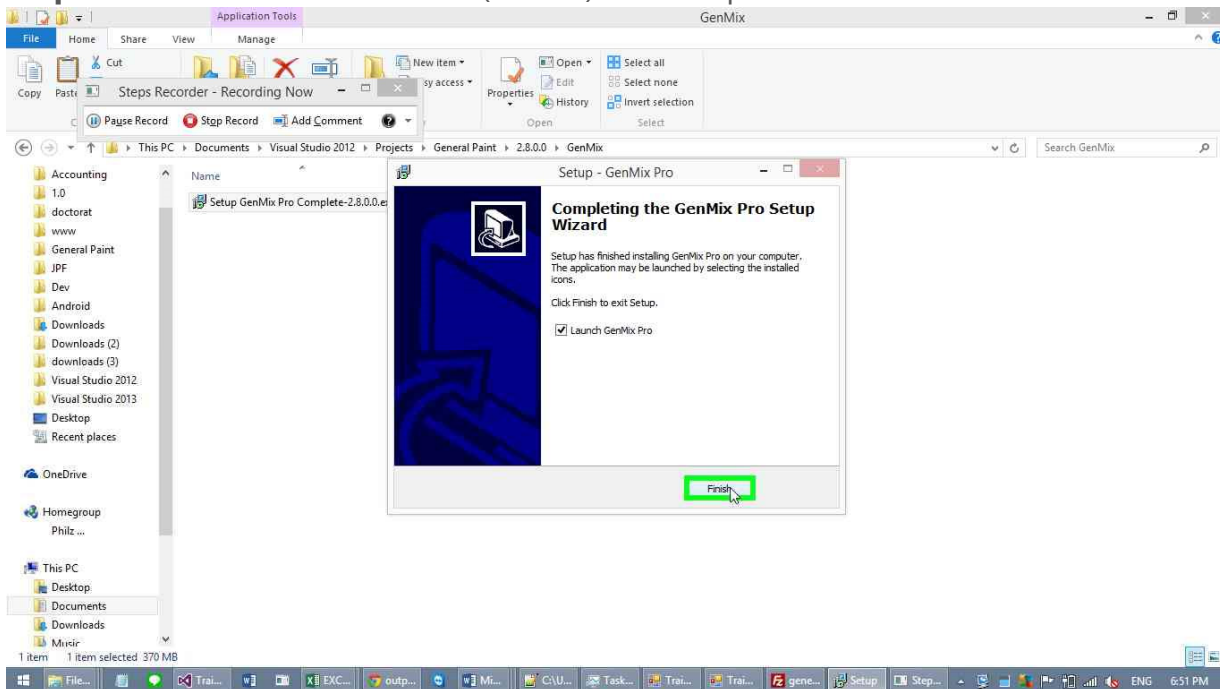
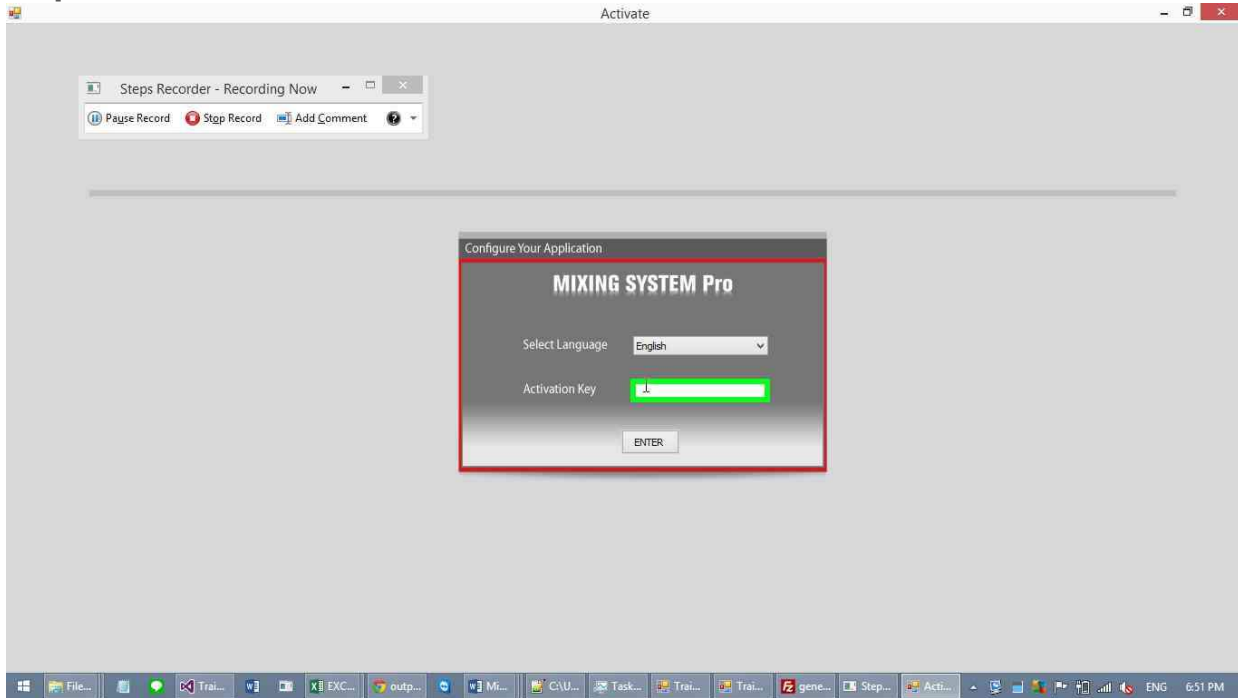**Step 14:** User left click in "Installing X-Rite MA91+OEM Driver v2.2.0"

Step 15: User left click on "Finish (button)" in "Setup - GenMix Pro"

Step 16: User left click on "Activate (window)" in "Activate"

2. Contact information

For more information or comments, please do not hesitate to contact the General Paint GenMix support team by email at: support.it@generalpaint.biz
or by phone at: +961 9 925 990
We are available from 8:00AM (GMT) to 8:00PM (GMT).